


# MOULDING PROFILES

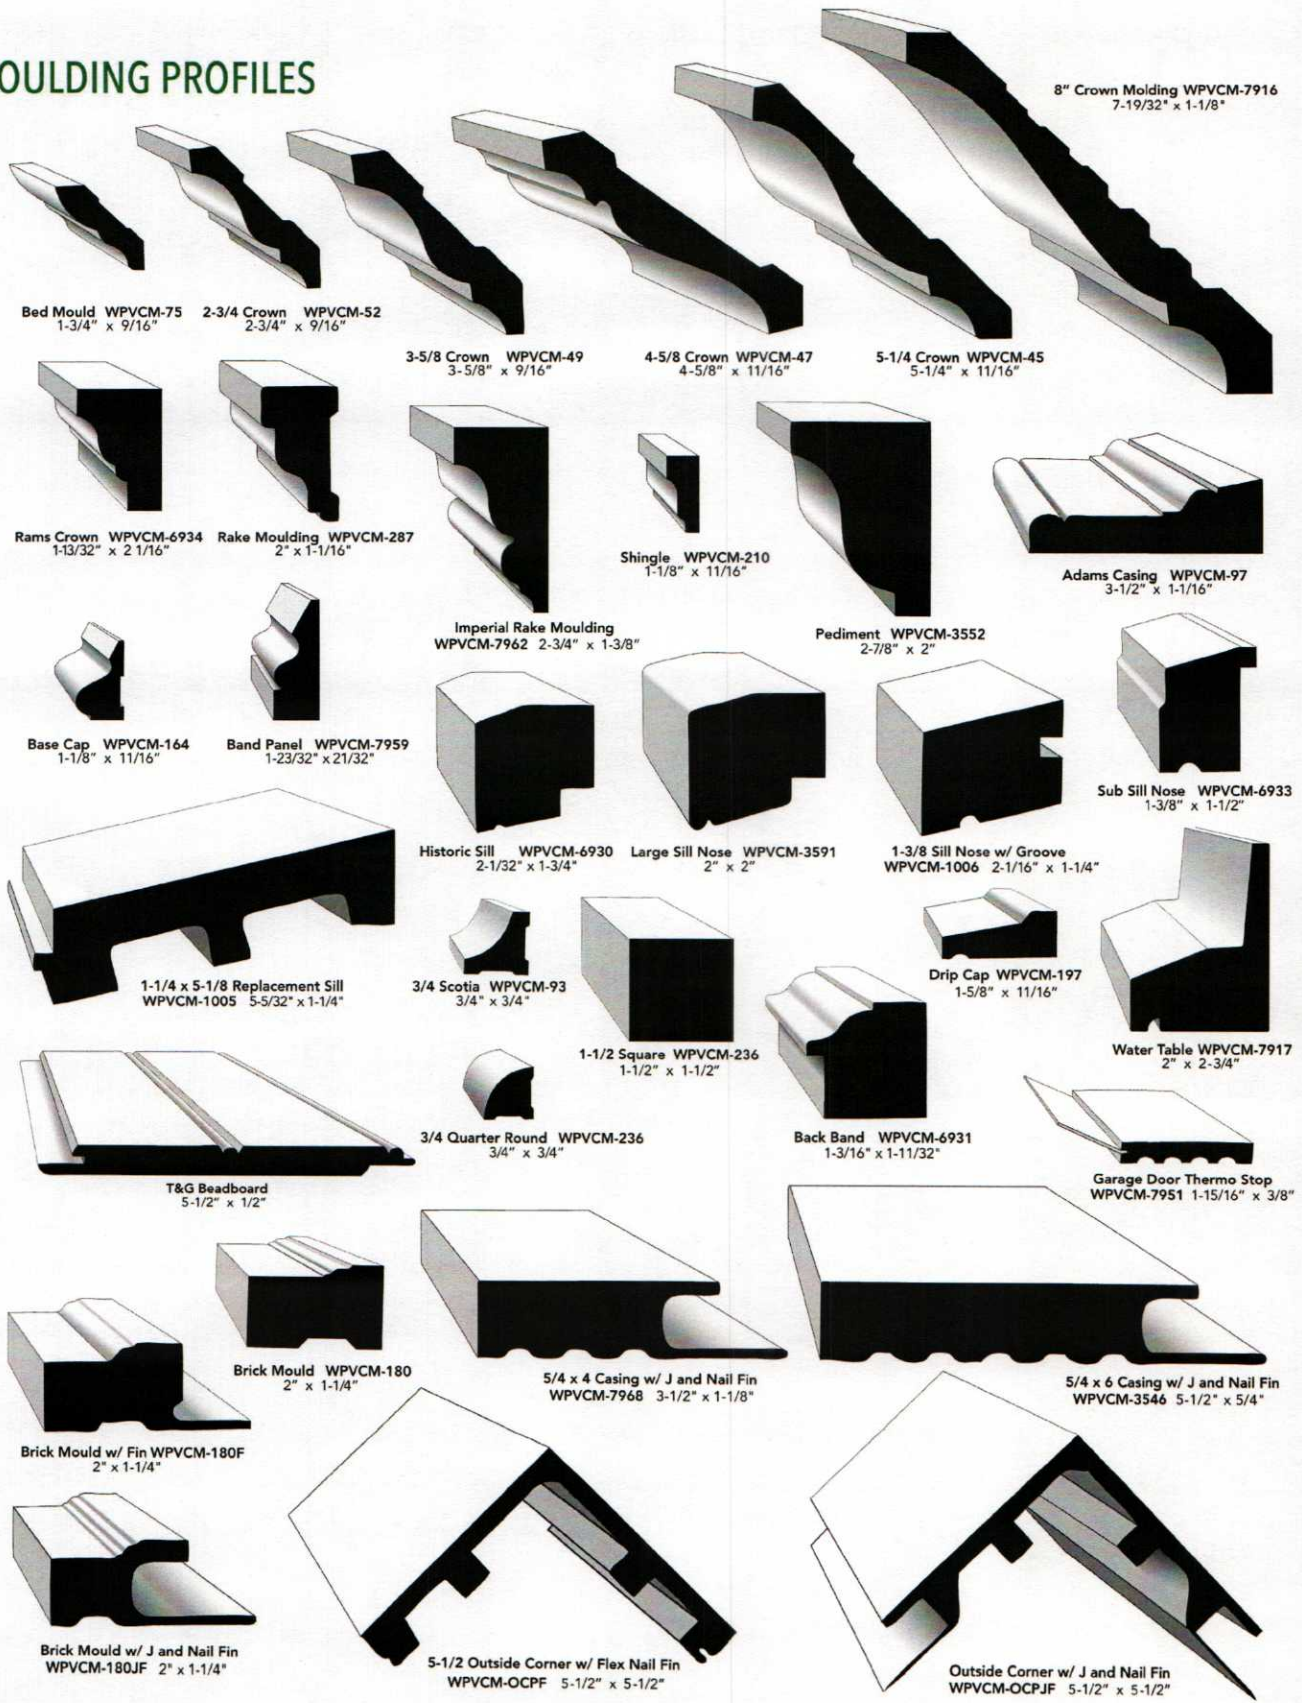

Installation: WOLF PVC Trim and Mouldings can be cut, drilled, routed, nailed and installed just like wood, using regular tools.

For complete installation instructions, visit [WOLFHomeProducts.com](http://WOLFHomeProducts.com).